

User Manual
Version V0.0.3

BIRDY WP_s ATEX

WATERPROOF ATEX POCSAG PAGER





REVISIONS TABLE

Version	Date	Description	Modified parts
V0.0.1	29/04/2013	First version	
V0.0.2	25/07/2013	Additional pictures for better understanding	§3.1 / §3.2
V0.0.3	25/08/2013	Operating temperatures	§3.4
<p><u>Software Version Management Process</u> : Vx.y.z z is incremented for minor modification such as grammar error, detail addition, format change, and as a general manner, are the draft versions prior to official versions y is incremented for validated official versions x is incremented for major modifications such as provision or feature addition</p>			



Table of content

1	BIRDY WPs ATEX presentation	4
1.1	Mechanical presentation.....	4
1.2	Icons description.....	4
1.3	Symbols description	5
1.4	Menus description.....	5
2	Using.....	6
2.1	Switching on BIRDY WPs ATEX.....	6
2.2	Switching off BIRDY WPs ATEX.....	6
2.3	Reading a received message	6
2.4	Erasing all the messages.....	6
2.5	User profile	6
2.6	Switching off BIRDY WPs ATEX.....	6
3	Important information	7
3.1	Power supply of BIRDY WPs ATEX.....	7
3.2	Programming BIRDY WPs ATEX.....	7
3.3	Maintaining BIRDY WPs ATEX	8
3.4	BIRDY WPs ATEX operating temperatures	8



1 BIRDY WPs ATEX presentation

1.1 Mechanical presentation



1.2 Icons description

	Power-on indicator light		Alert message in memory
	Active ringtone	 Clignotement	Unread alert message
	Programmed alarm clock		Battery level



1.3 Symbols description

According to the chosen menu, keys may have different meanings. That's the reason why a symbol is displayed above the keys on the screen in order to give the meaning of the keys.

Symbol	Description
✓	The key relates to the « validation » function
x	The key relates to the « cancellation » function
♪	The key relates to the « sound testing » function
↑ ↓	Possible using of keys ▼ and ▲
< >	Possible using of keys ◀ and ▶

1.4 Menus description

Menu	Description
◆	Profile : profile selection
↵	Technical menu : composed by 7 sub-menus among which : GPS module : GPS parameters tests and viewing Version : EEPROM and software versions indication Battery level : battery tension level indication
🕒	Time / alarm clock setting : time and alarm clock setting
🎵	Ringtone selection : selection of the ringtone
📞	Vibrator : selection of the vibrator functioning mode
🔍	Zoom : selection of the characters' display size
P	Language : selection of the pager language
⋮	Keyboard : composed by 2 sub-menus Keyboard locking : activation or inactivation of the keyboard locking Keyboard sound : activation or inactivation of the keyboard sounds
🔌	Switch off : BIRDY WPs shut down



2 Using

2.1 Switching on BIRDY WPs ATEX

1. Press key  during 5 seconds

2.2 Switching off BIRDY WPs ATEX

1. Press key 
2. Go to SWITCH OFF menu thanks to the keys  
3. Press key 
4. Press key 

2.3 Reading a received message

1. Press key 
2. The first line displays the message number with date and time
3. The remaining part of the displayed text is the received message
4. If the text is long, press keys   to scroll the message text
5. Key  enables to save or erase the message

2.4 Erasing all the messages

1. Press key 
2. Go to ERASE ALL menu thanks to keys  
3. Press key 
4. Press again  to confirm

2.5 User profile

1. Press key 
2. Press keys   to go to PROFILE menu
3. Press key  to select the PROFILE menu
4. Press again keys   to select a profile
5. Press once more on  to confirm the profile selection

2.6 Switching off BIRDY WPs ATEX

1. Press key 
2. Press keys   to go to SWITCH OFF menu
3. Press key  to select SWITCH OFF menu
4. Press again key  to switch off BIRDY WPs ATEX



3 Important information

3.1 Power supply of BIRDY WPs ATEX

- In the frame of BIRDY WPs ATEX using, protection against explosion risk cannot be guaranteed and will be cancelled if batteries recommended by TPL Systèmes are not used.
- The batteries which can be used in BIRDY WPs ATEX are the following ones (and only these ones):
 - Energizer E91
 - Duracell MN1500
- Using a rechargeable 1.2V battery is not allowed
- Battery replacement must be done in an area free of explosion risk (non ATEX area).
- Respect the polarity of the battery



- The battery door must be kept and repositioned after each battery replacement.

3.2 Programming BIRDY WPs ATEX

- BIRDY WPs ATEX programming can only be done by a certified distributor.
- If the safety label stuck on the programming contacts protection has been ripped open, the protection against the explosion risk cannot anymore be guaranteed; in such a case, this guaranty will be cancelled as well as the manufacturer's warranty.





3.3 Maintaining BIRDY WPs ATEX

- Maintaining and repairing tasks on BIRDY WPs ATEX pager can only be made by duly authorized and certified companies.

3.4 BIRDY WPs ATEX operating temperatures

- BIRDY WPs ATEX can be used in temperatures from -18°C to +50°C.